PHILIPS

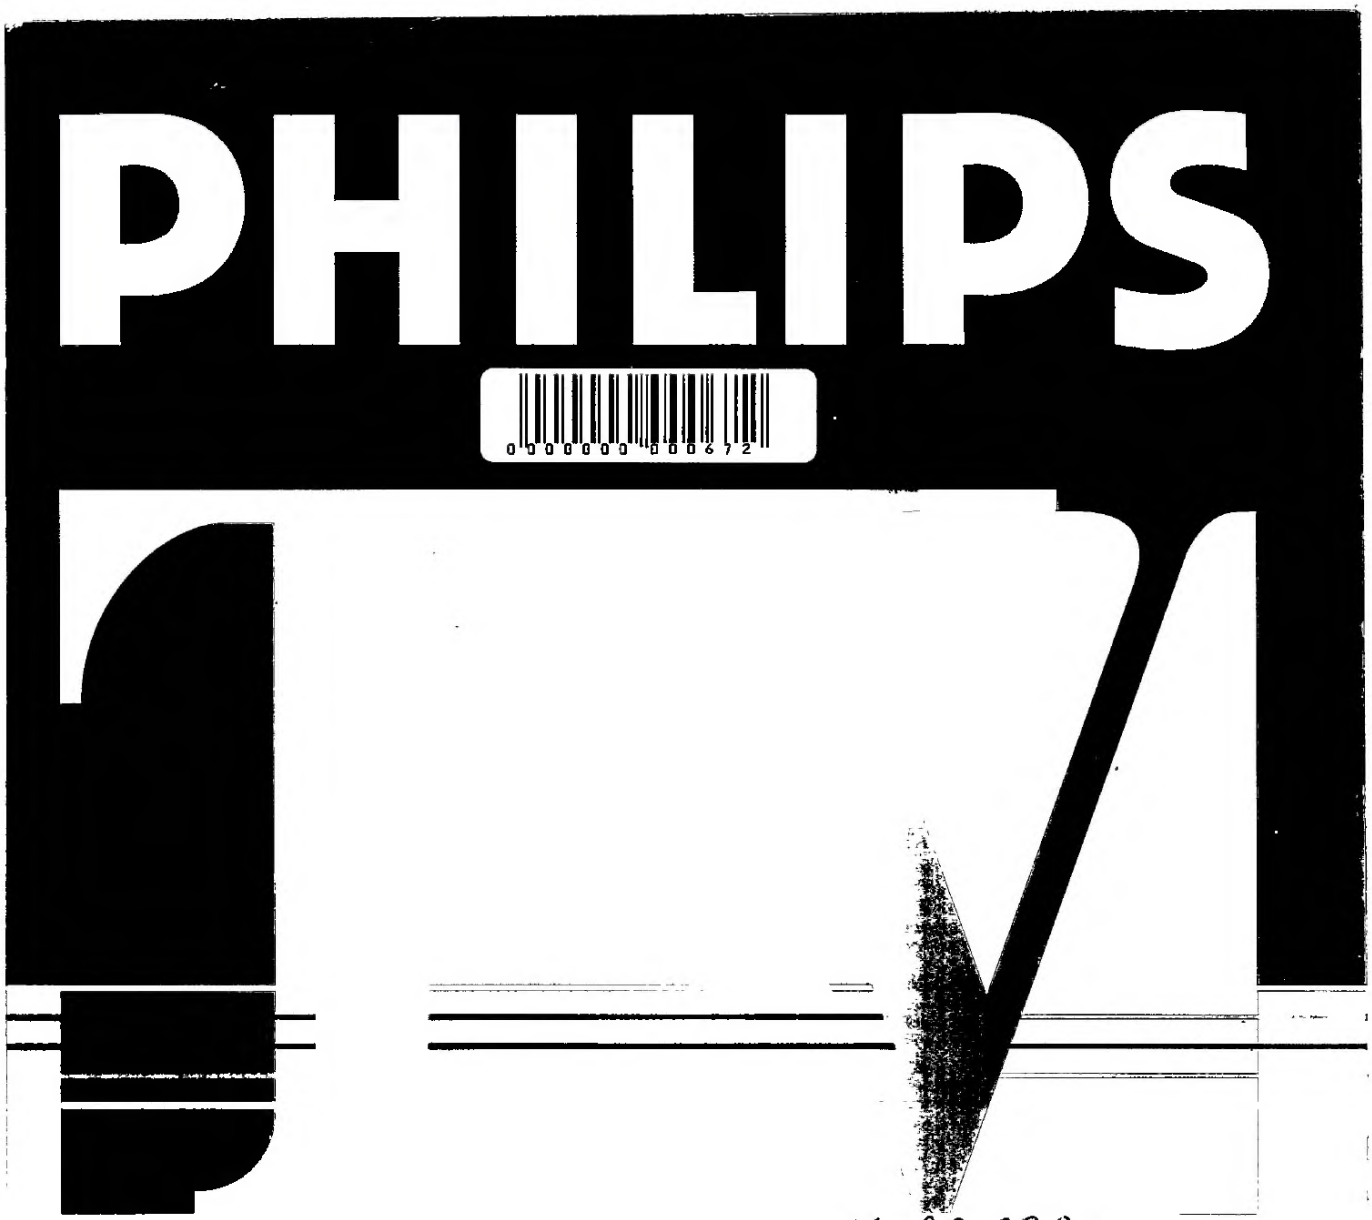

15 AA 3330
17 AA 3340

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

Information for users in the UK

(Not applicable outside the UK)

Service for you

Your colour television has been designed and manufactured to the highest standards, and subject to rigorous testing. Provided it is properly operated and maintained it will perform well for meny years. However, we all know that in such complex equipment components can sometimes fail.
The legal responsibility for meeting any in-guarantee service needs for your receiver rests with the dealer from whom you bought it. If your dealer has no service facilities, he can arrange for any work to be carried out by a competent third party organisation.
In any event you may expect speedy attention to restore your set to full working order without delay.

Free service for 2 years:
The dealer from whom the receiver was purchased will arrange for any defect in manufacture or material to be rectified without charge for a period of 2 years from the date of initial consumer sale provided:

- reasonable evidence is supplied that the set was purchased within 2 years prior to the date of claim
- the defect is not due to use of the set on an incorrect voltage or contrary to the Company's Operating Instructions or to eccidentel damage (whether in transit or otherwise); misuse; neglect; unauthorised or inexpert modification or repair.

The picture tube guarantee is administered by Philips Components Limited.
In addition to the customary 2 years free tube guarantee, Philips Components will consider extending the guarantee period, please see the separate card enclosed for details.

Service after 2 years:
Continuing service after 2 years is available in the same way but the service will be chargeable.

These stetements do not affect your statutory rights as a consumer.

If you heve eny question which your dealer cannot answer, please write to:

C.E. Consumer Relations Department
P.O. Box 298
420 London Road
Croydon CR9 3QR

All enquiries and claims can be handled more efficiently if accompanied by the identity Card printed on the back cover of this booklet – this is provided for your reference end should be kept in a safe place.

Positioning the TV

For the best results, choose a position where light does not fall directly on the screen, and at some distance away from radiators or other sources of heat. Leave a space of at least 3 cm all around the TV for ventilation, making sure that curtains, cupboards etc. cannot obstruct the air flow through the ventilation apertures.
The TV is intended for use in a domestic environment only and should never be operated or stored in excessively hot or humid atmospheres.

General Points

Please take note of the section 'General' at the end of the English section in this booklet.

Interference
The Department of Trade and Industry operates a Radio Investigation Service to help TV licence holders improve reception of BBC and IBA programmes where these are being spoilt by interference. If your dealer cannot help, ask et a main Post Office for the booklet 'How to Improve Television and Radio Reception'.

Mains connection

Before connecting the TV to the mains, check that the mains supply voltage corresponds to the voltage printed on the type plate on the rear panel of the TV. If the mains voltage is different, consult your dealer.

Important
The wires in the mains lead are coloured in according with the following code.

BLUE = NEUTRAL
BROWN = LIVE

To fit a mains plug:

Connect the BLUE wire in the mains lead to the NEUTRAL terminal of the plug, marked 'N' or coloured black.

Connect the BROWN wire in the mains lead to the LIVE terminal of the plug, marked 'L' or coloured red.

Do not make any connection to the terminal in the plug which is marked by the letter 'E' or by the safety earth symbol ⏚ or coloured green or green-end-yellow.

If the mains plug (or adapter) contains a fuse, this should have a value of 3A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead – not only over the two wires.

Connecting the aerial

The aerial should be connected to the socket marked ⊓ at the back of the set. An inferior aerial is likely to result in a poor, perhaps unstable picture with ghost images and lack of contrast. Make-shift loft or set-top aerials are often inadequate. Your dealer will know from experience the most suitable type for your locality.
Should you wish to use the set in conjunction with other equipment, which connects to the aerial socket such as TV games, or a video camera it is recommended that these be connected via a combiner unit to avoid repeated connection and disconnection of the aerial plug.

Loop aerial (if provided)
The loop aerial packed with the set will give satisfactory reception under good signal conditions.
Attach the ends of the loop to the mounting studs on the bracket and fit and tighten the knurled nuts. Then insert the plug on the lead into the aerial socket.

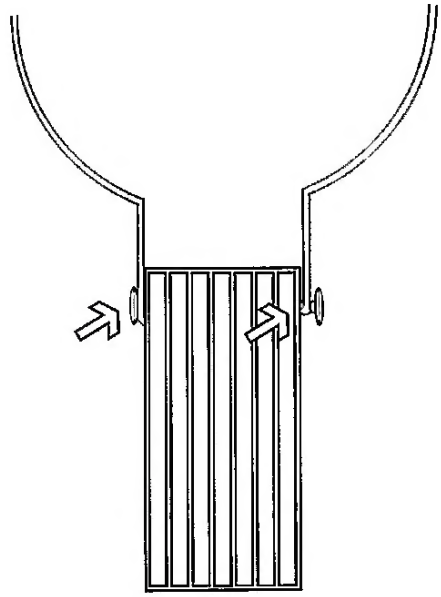

Downloaded from www.Manualslib.com manuals search engine.

Contents

Installing the TV	**Page 1**
Adjusting the TV	**Page 2**
Operating the TV	**Page 3**
Additional features	**Page 6**
General information	**Page 8**

GB

Introduction

TV - Indicates actions that are performed using the TV buttons or sockets.

- Indicates ections that are performed using the remote control handset.

Installing the TV

*Remove the TV set from its packaging.
* Find the remote control handset.
* Place the TV on a solid base (e.g. a TV/video cabinet).
* Leave at least 5 cm around each side of the TV for ventilation.

TV To connect the TV

IMPORTANT: The TV can only operete at e mains voltage of 220/240 V~, 50 HZ (Consult your dealer if the mains supply is different).

* Connect the TV to the mains supply socket.

* Connect the aerial plug to the socket on the back of the TV.

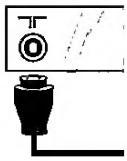

Indoor eerlel
Your TV is equipped with a high performance indoor aerial, nevertheless in some circumstances (specific regions or if surrounded by high buildings) reception problems could occur. Further improvement of reception could be obtained by:
- Rotating or varying the angle of the aerial.
- Using other aerial executions.
- Connecting your TV to an outdoor aerial.

TV To switch the TV on

* Press ⏻ POWER on the front of the TV.
» Program 1 will appear on the screen.

If the RED lamp below the screen is on, you must press ▼ or ▲ P PROGRAM.
» The TV will then switch on.

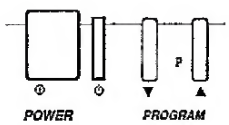

TV To switch the TV off

* Press ⏻ POWER on the front of the TV.
(If you want to switch off the TV temporarily refer to section "To select stand-by mode").

Downloaded from www.Manualslib.com manuals search engine

To insert batteries in the remote control handset

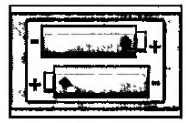

* Remove the battery cover on the back of the remote control handset.
* Insert the batteries supplied (1, 5V) as shown on drawing.
* Replece the battery cover.

To test the remote control handset

* Switch on the TV.
* Hold the remote control handset and direct it towards the headphones socket on the front of the TV.

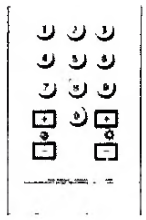

* Press any digit button on the remote control handset.
» A lamp near the Power button will flash "RED" each time you press a button.

***NOTE:** In this TV set information about the program number is normally displayed on the screen. If you want to switch off information refer to section "Display information".*

2 Adjusting the TV

The control buttons you need to store TV stations on program numbers ere on the front of the TV.
(39 stations can be stored on a program numbers using the following method).

To store TV stations

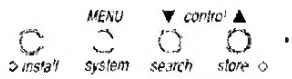

1 - Press ◇ INSTALL.
» The current program numbers and the TV- system are displayed on the screen.
The TV- system will be displayed only if your TV is multisystem.
If you do not have a multisystem TV please go to point 3.
2 - If you have a multisystem TV you can select for each separate program number what TV-system is required. You can select among the following TV-systems:
EUROPE : PAL BG - SECAM BG
(for TV stations situated outside France and United Kingdom)
UK : PAL I
FRANCE : SECAM L L'

Press SYSTEM one or more time to select the required TV-system.
3 - Press SEARCH.
» The TV automatically searches until a TV station is found and displayed on the screen.
4 - If you want to continue searching for a specific TV station then press SEARCH again.
5 - If you want to store the TV station give it a program number (1 to 39) by pressing ▼ or ▲ P PROGRAM.
» The selected program number is displayed on the screen.

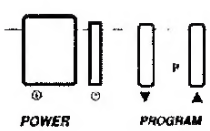

6 - Press ◇ STORE to store this selection.

Repeat step 1 to 6 until all TV stations you require have been stored on program numbers.

Downloaded from www.Manualslib.com manuals search engine

Auto store

* Press ◇ INSTALL.
» Information is displayed on the screen about the current program number and the system.

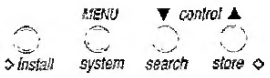

* Press SEARCH longer than 4 seconds.
» An auto-store action will be started.

When a TV station is found, it will be stored in memory as program number 1. The system starts again until all possible TV stations are found and stored.
At the end of the "Auto store" cycle the TV switches to Program 1.

***Note:** If you have a multisystem TV, Auto store will only be performed in the FRENCH system (SECAM L L').*

3 Operating the TV

Display information

The "On-screen-display" (OSD) information allows you to see the program number on which a TV station is stored, the volume bar and whether the sleep-timer mode is used.

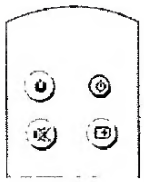

* Press ⊡ to display information.
* Press ⊡ again to switch off information.
With "OSD" off the information on the screen will disappear within 5 seconds.

* Press ◇ STORE to switch off information.

To select TV stations using the TV buttons

* Press ▲ P PROGRAM to select a TV station stored on a higher program number.
* Press ▼ P PROGRAM to select a TV station stored on a lower program number.

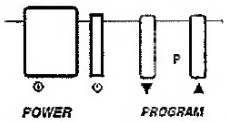

To select TV stations using the remote control handset

* Press + P to select a TV station stored on a higher program number.
* Press − P to select a TV station stored on a lower program number.

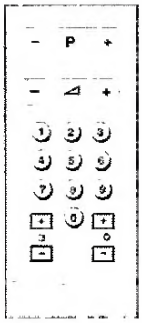

Or

* To select TV stations using program numbers 0 to 9 press the appropriate digit button.

* To select TV stations using program numbers 10 to 39 press two appropriate digit buttons.

Downloaded from www.Manualslib.com manuals search engine

To change and store the picture and sound setting

When the TV is switched on the picture and sound setting are at certain values; initially these values have been stored by the factory, but you can store your own "personal preferences" using the "On-screen-menu".

* Press MENU.
» The first item is displayed on the screen.
A moving bar is displayed which represent your changes as they are being made.

TV

☼ **The brightness**

* Press ▲ CONTROL to increase the brightness.
* Press ▼ CONTROL to decrease the brightness.
- Press MENU to select the next item.

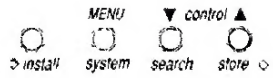

◑ **The contrast**

* Press ▲ CONTROL to increase the contrast.
* Press ▼ CONTROL to decrease the contrast.
- Press MENU to select the next item.

The colour

* Press ▲ CONTROL to increase the colour.
* Press ▼ CONTROL to decrease the colour.
- Press MENU again.

You are now out of the 'On- screen- menù'.

To change the personal volume preference

* Press ▲ VOLUME to increase the volume.
* Press ▼ VOLUME to decrease the volume.

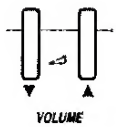

TV To store all your personal preferences

* Press INSTALL twice to store your own personal preference.

Downloaded from www.Manualslib.com manuals search engine

To change the colour, the brightness and the volume temporarily

To change the colour intensity

* Press the + button to increase the colour intensity.
* Press the − button to decrease the colour intensity.

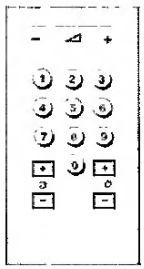

To change the brightness

* Press the + button to increase the colour intensity.
* Press the − button to decrease the colour intensity.

To change the volume

* Press + to increase the volume.
* Press − to decrease the volume.

* Press ▲ VOLUME to increase the volume.
* Press ▼ VOLUME to decrease the volume.



***NOTE:** If the moving bar is not displayed on the screen press on the remote control.*

To switch off the sound

* Press to switch off the sound.
» is displayed on the screen.
* Press again to switch the sound on.
» is removed from the screen.

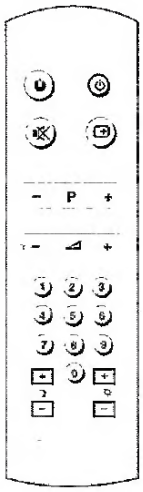

To select stand-by mode

The TV can be put into stand-by mode in the following ways:

Directly
* Press ⏻ .
» The RED lamp below the TV screen is on, and the TV is put into stand-by mode.

Autometically
* Approximately 15 minutes after a TV station stops broadcasting (closedown) the TV switches itself to stand-by mode automatically.

***NOTE:** Switch off your TV overnight instead of leaving it on stand-by.*
You save energy and the picture tube is demagnetised which supports good picture quality.

To switch on the TV from stand-by mode

* Press + or − P or press any digit button.

or

* Press ▼ or ▲ P PROGRAM.
» The RED lamp below the screen is off and the TV is switched on.

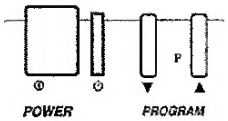

Downloaded from www.Manualslib.com manuals search engine

To select the "sleep-timer"

With this feature you can select a time period after which the TV switches to stand-by mode.

* Press ⏻ until the required time period is displayed on the screen.
(The time-period can be set in steps of 15 minutes starting from 90 minutes).
The count-down starts immediately. The time period displayed on the screen will disappear within 5 seconds.
During the final minute of the selected time period, the seconds remeining begin to "count down" on the screen informing you that the TV is going to switch to stand-by mode. At the end of this time period the TV switches to stand-by mode and the RED lamp below the screen lights.

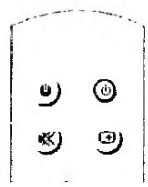

If you want to stop the "sleep-timer" press ⏻ until the selected time period displayed on the screen is "00".

4 Additional features

To connect a video recorder

Read the operating manual supplied with your video recorder for connections details.

TV

* Switch off the TV before connecting the video recorder.

VCR

* Connect the aerial socket to the ⊓ input on the video recorder.

* Connect one side of the cable supplied with the video recorder to the **TV** output of the video recorder and the other one to the ⊓ input on the TV. (1)

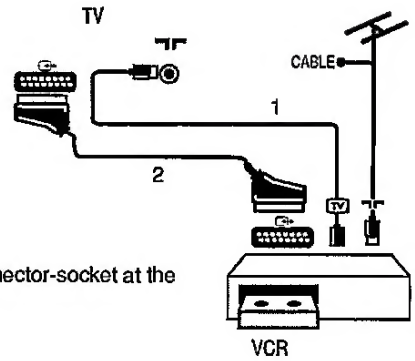

Also the **VCR** can be connected with a Eurocable at the Euroconnector-socket at the Euroconnector-socket at the back of the TV . (2)
(see chapter 'To connect other devices').

See on the next page the chapter " To store the video recorder signal on a program number".

Downloaded from www.Manualslib.com manuals search engine

To store the video recorder signal on a program number

Only if you are using the TV aerial cable.

* Switch on the TV and the video recorder.

VCR

* Insert a pre-recorded tape in the video recorder and press PLAY.

TV

* Press ◇ INSTALL.
(If you are using a multi-system TV set, select the system according to the one of your VCR equipment).
* Press SEARCH.
» The TV automatically searches for a video signal. If necessary press this button until the video signal is found.
* Select an unused program number by pressing ▼ or ▲ P PROGRAM.
* Press ◇ STORE to store the video signal on a program number.

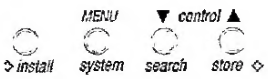

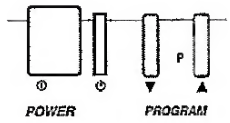

VCR

* Press STOP on the video recorder.

To select the program number for the video recorder

* Press + or − P or a digit button for the program number on which the video signal has been stored.

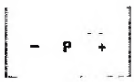

TV

* Press ▼ or ▲ P PROGRAM for the program number of the video signal.

TV To connect other devices

e.g. CD video.

Read the operating manual supplied with the device first.

A device with a Euroconnector can be connected with a Eurocable to the Euroconnector socket at the back of the TV.(1)
In this case the TV is ready to receive the device signal; you need only switch on your TV and start the device.

If, after switching on the device, the TV does not switch automatically to the connected device, select Program **0** by pressing ▼ or ▲ P PROGRAM .
The program number will automatically be displayed on the screen.

or

A device can be connected to the ⊓ socket at the back of the TV. (2)
In this case the signal must be stored on a program number before it can be selected.
(Refer to section " To store a video recorder signal on a program number ").

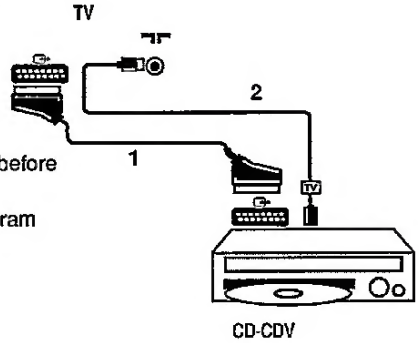

Downloaded from www.Manualslib.com manuals search engine

To connect headphones

The headphones impedance used must be 8 to 1000 ohm; jack 3.5 mm.
* Connect the headphones jack-plug to the socket located on the front of the TV.

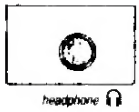

NOTE: The loudspeaker is switched off automatically when the headphones are connected.

5 General information

To clean the TV screen

It is possible to clean the TV screen using a slightly damp chamois leather.
Never use aggressive cleaning agents.

Fault indication

Important: Never attempt to repair a broken TV yourself; always consult a skilled TV service engineer.

If the TV does not give the desired picture or sound quality after switching on then check that:
- The aerial is connected properly.
- All controls and buttons are selected correctly.
- The selected TV station has not "closed-down".
- The sound is not switched on (not muted).

If the remote control is not working properly, check the batteries.

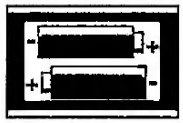

If the maximum volume is not sufficient or if it is not possible to search or store TV-stations, your TV is accidentally put in the socalled "Hotel Mode". To switch off this "Hotel Mode", pleese select program 38 end press the ◇ INSTALL and SEARCH button simultaneously.

Switch off the TV if:

- The RED lamp below the screen is flashing continuously.
- A bright white line is displayed across the screen.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

GB	**IDENTITY CARD**	This card, together with the terms of guarantee (to be provided by your dealer), forms the full certificate of guarantee for this appliance
D	**GERÄTE-KENNKARTE**	Diese Karte ist, zusammen mit den Garantiebestimmungen, d e Ihr Handler Ihnen aushandigt, Ihr Garantieschein für dieses Gerat.
F	**CARTE D'INDENTIFI-CATION**	Associée aux conditions de garantie (qui vous sont remises par le revendeur), cette carte constitua le certificat de garantie de cet appareil
NL	**INDENTIFI-CATIEKAART**	Deze kaart vormt, samen met de garantievoorwaarden (welke door uw dealer verstrekt worden), het garantiebewijs voor dit apparaat
I	**CARTA D'IDENTIFI-CAZIONE**	Questa cartolina rappresenta insieme alle condizioni di garanzia (da consegnare dal vostro rivenditore) il documento di garanzia per questo apparecchio
E	**TARJETA DE INDENTIFICACIÓN**	La garantía de este aparato se compone de esta tarjeta y de las condiciones de garantía que le entregará su concesionario
P	**CARTÃO DE INDENTIFICAÇÃO**	Este cartão, em conjunto com as condições de garantia em vigor (explicadas pelo seu vendedor) constituem o certificado da garantia do seu aparelho.
DK	**I.D. KORT**	Dette kort, udfyldt af Deres forhandler, er tilstrækkelig garantidokumentation for dette apparat.
N	**IDENTIFIKA-SJOSKORT**	Dette kort, sammen med garantibetingelsene (som De får av forhandleren) utgjor garantibeviset for dette apparat
S	**IDENTIFIERINGS-KORT**	I Sverige gäller särskilda konsumentbestämmelser Var vanlig kontakta radiohandlaren for information
SF	**TUNNISTUS-KORTTI**	Taman lahteen takuutodistus muodostuu tasta kortista ja takuuehdoista (jalleenmyyja antaa mukaan).
GR	**ΔΕΛΤΙΟ ΤΑΥΤΟΤΗΤΑΣ**	Η καρτελλα αυτη μαζι με τους ορους εγγυησεως (που θα προμηθευθειτε απο το καταστημα που αγορασατε την συσκευη) αποτελουν το πληρες η αποδειητικο εγγυησεως της συσκευης σας

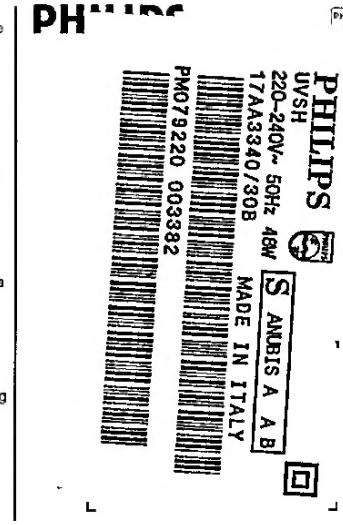

15AA3330
17AA3340

Printed in Italy by G.S.F. 91/12 11 10

RC 3119 106 1974 2

Downloaded from www.Manualslib.com manuals search engine